

## Klimaanlage/Air conditioning

Die Klimaanlage funktioniert nur bei geschlossenen Fenstern. Die Bedienung der Klimaanlage erfolgt über die Fernbedienung. Siehe Abbildung auf Seite

Taste	Funktion
A	<b>Anzeige (Central)</b>  Leuchtet, wenn der Fernbetrieb aufgrund Sperrung durch die Zentralsteuerungsanlage nicht möglich ist.
B	<b>Temperaturanzeige</b>  Zeigt die mit den TEMP.- Tasten eingestellte Temperatur
C	<b>Betriebsarten</b>  Zeigt den jeweiligen Betriebszustand an:   Automatik (Kühlen und Heizen)   Kühlen   Gebläse (im Heizbetrieb ausgeschaltet)   Heizen   Trocknen
D	<b>Taste TEMP. (Temperatur)</b>  Dient zur Einstellung der Raumtemperatur. Die Änderung der Einstellung erfolgt in Schritten von 1°C.
E	<b>Temp. Check</b>  Überprüfen der Raumtemperatur
F	<b>Anzeige für Gebläseleistung</b>  Zeigt die eingestellte Gebläseleistung an.
G	<b>Anzeige Netzstrom</b>

	Diese Anzeige leuchtet, wenn der Netzstrom der Fernbedienung eingeschaltet ist
H	<b>Taste (ON/OFF) EIN/AUS</b>  Schaltet zwischen Betrieb und Stopp um. Während des Betriebs leuchtet die Taste.
I	<b>Betriebsleuchte</b>  Leuchtet während des Betriebs.
J	<b>Einstellung der Gebläseleistung</b>  Dienst zur Wahl der Gebläseleistung.

*Air conditioning is only working with windows closed. For operation please use the remote control. See figure on page*

<i>Key</i>	<i>Function</i>
<i>A</i>	<b><i>Display (Central)</i></b>  <i>Lights when the remote operation is not possible due to blocking by the central control system.</i>
<i>B</i>	<b><i>Temperature display</i></b>  <i>Displays the TEMP -. Buttons set temperature</i>
<i>C</i>	<b><i>Modes</i></b>  <i>Displays the current operating status:</i>   <i>Automatic (cooling and heating)</i>  <i>Cooling</i>  <i>Fan (in heating mode off)</i>  <i>Heating</i>  <i>Drying</i>
<i>D</i>	<b><i>TEMP. Key (temperature)</i></b>  <i>Service to adjust the room temperature. Changing the setting in steps of 1 ° C.</i>

<i>E</i>	<b><i>Temp. Check</i></b> <i>Control room temperature</i>
<i>F</i>	<b><i>Display for fan power</i></b> <i>Displays the set fan power.</i>
<i>G</i>	<b><i>Display power</i></b> <i>This indicator lights when the power is turned on the remote control.</i>
<i>H</i>	<b><i>Key (ON/OFF)</i></b> <i>Switches between running and stopping. During operation, the button is lit.</i>
<i>I</i>	<b><i>Operating lamp</i></b> <i>Lights up during operation.</i>
<i>J</i>	<b><i>Key for setting the fan power</i></b> <i>Service to select the blower speed.</i>