

## Manual Dishwasher

1. First, remove any scraps of food.
2. Heavily soiled and large parts in the lower basket, small parts in the upper basket (check all openings down) cutlery in the small basket.
3. Put a Cleaning Tab into the slot on the inside of the dishwasher door and close the cover.
4. Controller at level 70° for strongly- and level 50° for normally soiled tableware and press the power switch.
5. Dishwasher door shut until it clicks.
6. After the cleaning process ,open the door carefully and turn off the machine with the main switch. It can escape hot air. Let it cool down and dispel dishes.