

Manual Microwave

To turn on the microwave, please press the left knob (about 5sec.), to open the microwave, please press the right knob (about 5sk.). Put your food in a suitable dish (glass, porcelain, ceramic, heat resistant plastic, NO METAL) and place it on the turntable/floor.

Close the door by simply pushing. Choice of microwave power:

900 W - for very fast heating liquids and beverages

600 W - heating and cooking of most foods

360 W - for the cooking of meat and to the heat-sensitive food

180 W - for quick thawing and sources

90 W - for gentle defrosting delicate foods.

Use the left knob to select the desired wattage. When you have done this, please press the right rotary knob to confirm the entry. An elapsed time of one minute is now displayed. You can also change this time using the left rotary knob. Confirm your entry again with the left rotary knob. To start the microwave now, press the right rotary knob once. When the time has elapsed, an acoustic signal sounds and the device is automatically switched off. If the door is opened during operation, the microwave switches off and the time lapse is interrupted. Operation will resume as soon as the door is closed again. During operation, the selected time can be changed, as well as terminated by turning back to "0". When the time has elapsed, an acoustic signal sounds and the unit is turned off automatically. When the door is opened during operation, the microwave oven is switched off and the timing is interrupted. The operation will resume once the door is closed again. During operation, the selected time may be varied readily, and by turning back to "0" ended.